

MANUAL

STILLE WILLY'S MIXER

1

Mixer and microphone

1. Connect the power supply

Make sure the mixer has constant power.

Plug the power cord into the back of the mixer and gently tighten the ring.

2. Mixer settings

In the photo below you can see the mixer with all the default settings.

The "Phantom" and "CD/TAPE TO MIX" buttons circled in red must be pressed.

For all other knobs, we recommend turning them if necessary, as shown in the photo below.

This is the best way to hear the sound through the microphone.

Z.O.Z.



2

Mixer and microphone

3. Connect transmitter

The transmitter must be connected to the mixer.

To do this, use the included Tulp cable (Aux to Tulp red/white).

Plug the aux input into the transmitter (point 2 in the photo) and the red/white tulip end into the output of the mixer (point 1 in the photo).

Turn on the transmitter by setting it to "HI" and select a channel of your choice. For example channel 1.

4. Connect microphone

Plug the microphone into the top left of the mixer (CLR connector). See point 3 in the photo below.

Some microphones still need to be turned on. This can be done by moving the slider on the microphone back and forth.

5. Connect music source (phone/tablet/PC)

It is possible to play music and speak via the microphone at the same time.

You connect your phone/tablet/PC to the mixer with an extra Tulp cable (Aux to Tulp red/white).

Connect the Aux input to your music source using an iPhone or Samsung adapter cable.

Insert the red/white tulip end into the input of the mixer. see point 1 in the photo.

Then play music from your music source.

